

Harrington Task

Operating Instructions

WAVE OFFICE



1. Ratchet Operated Backrest Height

Lift backrest to adjust incrementally. At top of adjustment, backrest will reset to bottom position.



2. Back Rake Adjustment Lever

Pull up to adjust back rake (angle), push down again to lock in place.



3. Seat Tilt Adjustment Lever

Pull up to adjust seat tilt, push down again to lock in place.



4. Seat Height Adjustment Lever

Pull up and hold to adjust seat height, release once height is set.



8. Arm Rest Height Adjustment Button

Press and hold to adjust armrest height, release once height is set.




7. Seat Depth Adjustment Lever

Pull up and hold to adjust seat depth; seat will slide forwards/backwards. Release once depth is set.



6. Seat Tilt Tension Adjustment Dial

Turn clockwise / anti-clockwise to adjust tension in seat tilting mechanism.

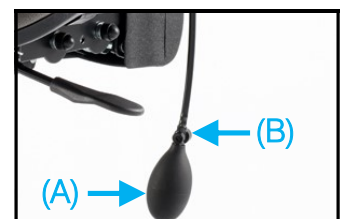

5. Inflatable Lumbar Support

Squeeze pump (A) to inflate lumbar support, press button (B) to deflate.

